


Roman Shade Measuring Instructions

Measuring Inside Mount (IB) Shades:

Measure the exact width (A) and length (B) of the window opening as shown. The factory will deduct 3/8" overall from the window width for clearance. On all inside mount shades, a small light gap will be visible.

Measuring Outside Mount (OB) Shades:

Measure the exact width (A) and length (B) of the window opening you wish to cover. The shade should cover the window opening by at least 2" on both the width and length. To cover a window sill, provide a measurement (C) beyond the sill.

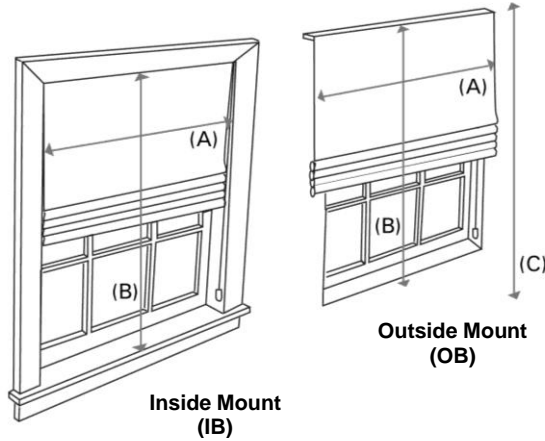

Roman Shade Specifications

Rail Depth:

- Standard Pull Cord = 1 1/2"
- Cord Loop Clutch = 2 1/2"
- Cordless = 2"
- Battery and 24-Volt Motorized Options = 2 1/2"
- 110-Volt Motorized Options = 3 1/2"

Stacking Height:

<u>Flat Style</u>	<u>Hobbled Style</u>
36" Drop = ± 6"	36" Drop = ± 9"
48" Drop = ± 9"	48" Drop = ± 12"
72" Drop = ± 12"	72" Drop = ± 15"
96" Drop = ± 18"	96" Drop = ± 21"

Hembar: 1 3/8" 3-Side Welded Pocket

Valance: 5 1/2" Fabric Valance with 1 3/8" 3-Side Welded Pocket